

AIR INTAKE HEATER LOCATION  
NOTE: DELETED PRIOR TO TAKING PHOTO

GLOW PLUG  
RELAY

AIR INTAKE  
HEATER RELAY

THIS LEAD HAS POWER WHEN THE  
PCM ACTIVATES THE GLOW PLUGS

HOT LEADS

