

Anti-Theft System (If equipped)

When armed, this system helps protect your vehicle against break-ins or theft.

When an unauthorized entry occurs, the system triggers and will:

- ☐ flash the headlamps, parking lamps, and alarm indicator lamp
- ☐ honk the horn
- ☐ disable the starting circuit to prevent the vehicle from being started

Arming the system

1. Remove the key from the ignition.
2. Open any door. The alarm indicator light will start flashing to remind you to arm the system.
3. Lock the doors by using the power door lock switch. The alarm indicator light will now glow steadily.

NOTE: The system can also be armed by pressing the **LOCK** button on the remote transmitter after the doors have been closed.

4. Close all doors. The alarm indicator light will then remain on steadily for approximately 30 more seconds and then go out. When the light goes out the system is armed.

NOTE: Be sure to close all doors completely. If not, the alarm indicator light will remain on. Remember, your anti-theft system is armed only after the alarm indicator light remains on steadily for approximately 30 seconds after the last door is closed, and then goes out.

The anti-theft system is designed to work with the factory installed remote entry system. It may not work with other remote entry systems.

Disarming an untriggered anti-theft system

You can disarm the system by unlocking either frontdoor with your door key. Turn the key all the way to the end of travel or the system will not disarm.

You can also disarm the system by unlocking the driver's door by using the **UNLOCK** button of the remote entry transmitter.

If the system is armed and you remain in your vehicle, simply insert the key into the ignition and turn it to **ON**. This disarms the system and allows you to open the door and exit without triggering the system.

Disarming a triggered system

The alarm can be disarmed by:

- ☐ unlocking any door with the key, or
- ☐ using the **UNLOCK** button of the remote entry transmitter


NOTE: The flashing lights and honking horn will shut off automatically within 2 minutes 45 seconds after the system is triggered. It will trigger again if another intrusion occurs. However, the starter circuit remains disabled until the system is disarmed.

Windows

Operating the Windows Manually

The door windows are opened and closed by turning the handle crank.

The vent windows can be opened and closed by following the directions in the following illustration.

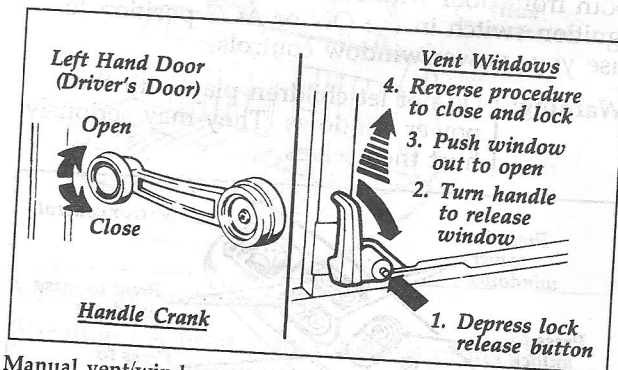

Manual vent/window operation