


# COMPONENT LOCATIONS

## Left of Engine

1. Oil level indicator
2. Fuel Rail Pressure (FRP) sensor
3. Engine oil cooler
4. Fuel return line

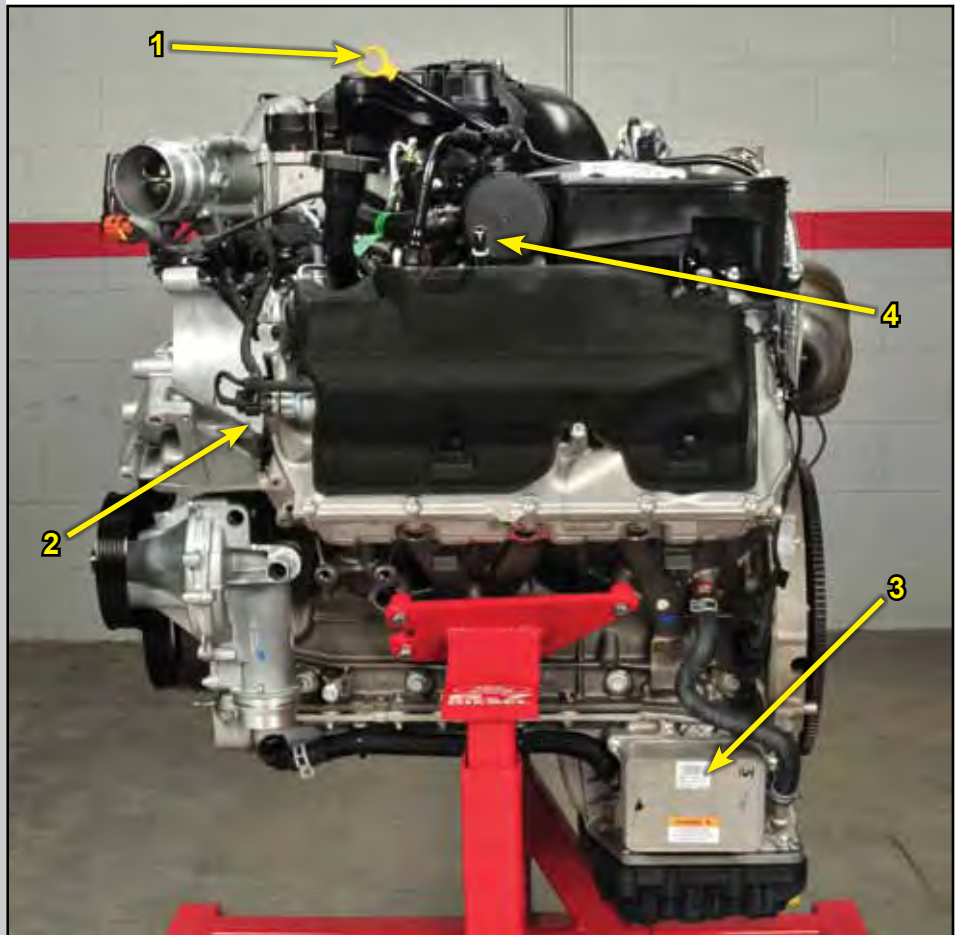

## Left Rear of Engine

1. Crankcase vent oil separator
2. Water pump inlet
3. Crankshaft Position (CKP) sensor
4. Wastegate actuator

