

Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.

FROM
BATTERY
JUNCTION
BOX
PAGE 25-1
TO \$138
PAGE 25-6
TO \$138
PAGE 25-6

* START OR RUN

**OUTPUT SHAFT
SPEED (OSS)
SENSOR**

RADIO
PAGES 130-2,
130-6

679 | GY&K

SEE
PROGRAM-
MABLE RIDE
CONTROL
PAGE 41-2

AIR SUSPENSION/ECO
STEERING MODULE
PAGE 41-2

CENTRAL
JUNCTION
BOX

**ELECTRONIC
MODULE (GEM)**
- PAGE 50-3

SOLD STATE

71 06/1
↓
OVER HEAD
CONSOLE
PAGE 102-2

1498 PK/O
↓
ALL WHEEL
DRIVE
PAGE 34-3

SPEED
CONTROL
SERVO
PAGE 31-3

